Mitutoyo



High-Performance Height Gage QM-Height Series



High-Performance Height Gage QM-Height Series

- Best-in-class accuracy ±(2.4+2.1L/600) µm
- Built-in pneumatic flotation system enables smooth movement over a surface plate.
 Models without the air suspension feature are also available.
- Simple-to-use control panel enables most measurements to be made with a single keystroke.
- Battery life of 1200 hours in continuous use with four AA batteries, an improvement from 300 hours. (Four commercially available nickel hydride batteries can also be used.)
- Install the optional U-WAVE-T measurement data communication system to output measurement data directly to Excel or SPC software on your PC.
 The USB communication driver can be downloaded from the Mitutoyo website. (Communication software is separately required.) https://www.mitutoyo.co.jp/eng/contact/products/usb/index.html



GO/±NG judgment by LED and display symbols

 LEDs indicate tolerance judgment status – green for GO, red for +NG, and orange for -NG. Status is also indicated by corresponding symbols appearing on the display.











Intuitive buttons and layout

- The symbols are for frequently used keys.
- Cross-keys provide better operability.





Inside/outside diameters, maximum/minimum heights and displacement can be measured using a standard probe

 Besides height measurement, Mitutoyo's proprietary mechanism and firmware enables scanning measurement of inside/outside diameters, maximum/minimum heights, and height differences.





ID measurement

OD measurement



"d2" is a generic term given to Digimatic output that supports up to eight input/output digits.



QM-Height measures height, height difference (step), inside/outside widths, inside/outside diameters, circle pitch, free-form surface maximum/minimum heights and height difference by scanning measurement*.

Two subdisplay modes display the value from the previous measurements or the value from the zero/origin point. Origin points can also be set from hole centers.

*Scanning measurement stroke is approx. 1 mm above and below from the start point of measurement.

ABSOLUTE encoder maintains the origin

 The electromagnetic induction type ABSOLUTE encoder maintains the origin. There is no need to set the origin after turning on the power.

(Except when there is a considerable environmental change.)



New d2 Digimatic and USB outputs

Digimatic and USB ports are provided as standard. Using the **U-WAVE-T** measurement data wireless communication system enables instant transmission of measurement data to a PC via wireless communication which reduces manual input errors and improves data reliability and operational efficiency.





To install **U-WAVE-T**, separately purchase the optional mounting plate (02AZE990).



Power supply

- Four alkaline AA/LR6 batteries (standard accessories)
- Also operates on four NiMH AA rechargeable batteries
- AC adapter (packages available with or without AC adapter)
- 1200 hours of battery life in continuous use



Probe elevation wheel

 Used for measurement, allowing fine or coarse adjustment of probe height.



Air-suspension feature

 Pressing a button on the grip activates the internal air pump. The base rises on a cushion of air and is able to be moved smoothly over the surface plate.

Note: Measurements should not be made while this function is in use as it will cause measurement error.









Measurement examples

Height measurement


















Runout measurement




After scanning the surface, the runout will be shown in the display as (Max. value - Min. value)







Height difference measurement (1)



Height A and height B from the surface plate will be displayed.








Height B





Height difference measurement (2)



After measuring heights A and B, the height difference C between them can be shown in the lower row of the display.











Centralized Data Management

Misinput due to manual input can be eliminated and dramatically improve operational efficiency.

600 mm stroke type

Without air-suspension: **518-242**, **518-243** With air-suspension: **518-246**, **518-247**

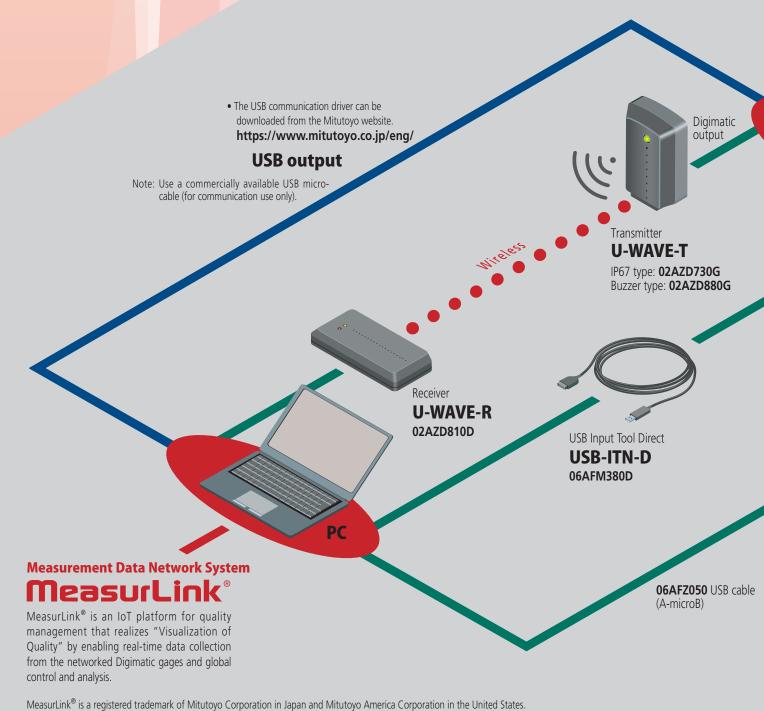

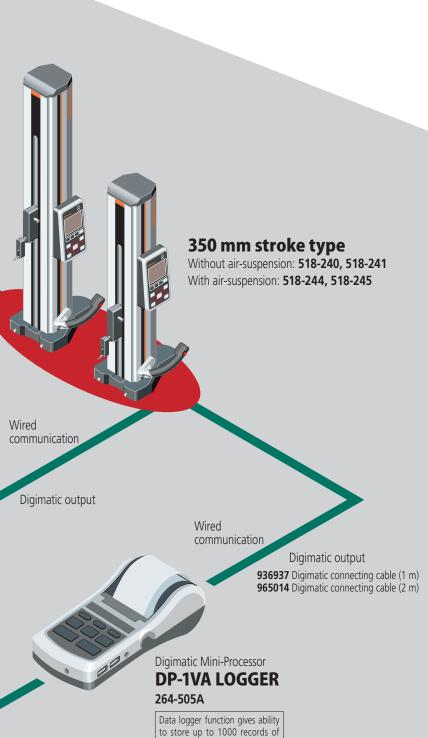

measurement data.

Optional parts that enable centralized data management

Order No.	Item name	
Small printer equipped with Data Logger		
264-505A	DP-1VA LOGGER	
936937	Digimatic connecting cable (1 m)	
965014	Digimatic connecting cable (2 m)	
06AFZ050	USB cable (A-microB)	
Measurement Data Input Unit		
06AFM380D	USB Input Tool Direct USB-ITN-D	
Measurement data wireless communication system		
02AZD730G	U-WAVE-T (Transmission unit) (IP67 type)	
02AZD880G	U-WAVE-T (Transmission unit) (Buzzer type)	
02AZD790D	U-WAVE-T dedicated cable (Standard use)	
02AZE140D	U-WAVE-T dedicated cable (For foot switch)	
02AZD810D	U-WAVE-R receiver	
02AZE990	U-WAVE mounting plate	
Measurement data collection software for Excel USB-IT PAK V2.1		
Measurement data network system MeasurLink		

Contact points for a wide range of measurements (Refer to page 8.)

No.	Order No.	Item description		
	Depth probe			
(1)	12AAC072	Depth probe		
	Interchangeable c	ontact points for ø5 stepped probe		
(2)	957261	ø2 mm ball (coaxial type)		
(3)	957262	ø3 mm ball (coaxial type)		
(4)	957263	ø4 mm ball (coaxial type)		
(5)	957264	ø14 mm disk		
(6)	957265	ø20 mm disk		
(7)	12AAA788	ø4 mm ball (eccentric type)		
(8)	12AAA789	ø6 mm ball (eccentric type)		
	Special holder			
(9)	12AAA792	Holder for dial indicator		
(10)	12AAA793	Holder (Long)		
	AC Adapter			
	06AFZ950JA	AD620JA for Japan/U.S.		
	06AFZ950D	AD620D for the EU		
	06AFZ950E	AD620E for the UK		
06AFZ950K AD620K for Ko		AD620K for Korea		
06AEG180DC AD620DC for China		AD620DC for China		
	Others			
	05HZA143	9x9 mm adapter (clamp underneath is required)		
	05GZA033	Clamp (for 9x9 mm adapter)		
	05HZA144	6.35x12.7 mm adapter (clamp underneath is required)		
	901385	Clamp (for 6.35x12.7 mm adapter)		
	05HZA173	Scriber*		
Moto	A gage block may	he required for the zero setting depending on the		

Note: A gage block may be required for the zero-setting depending on the probe or contact point to be used.

* Used for measurements, cannot be used for scribing.

Mitutoyo

Contact points for a wide range of measurements

1) **12AAC072**


Depth probe (94.6) 90 47 147




7) **12AAA788**

ø4 mm ball (eccentric type) 52.5 20

2) 957261 ø2 mm ball (coaxial type)









8) **12AAA789**


ø6 mm ball (eccentric type)



3) **957262** ø3 mm ball (coaxial type)











9) **12AAA792**

Holder for dial indicator

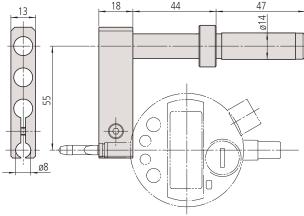



4) **957263**

ø4 mm ball (coaxial type)



10) **12AAA793**

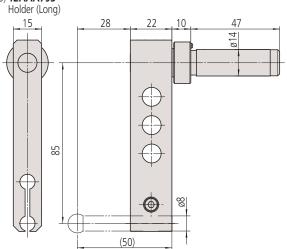


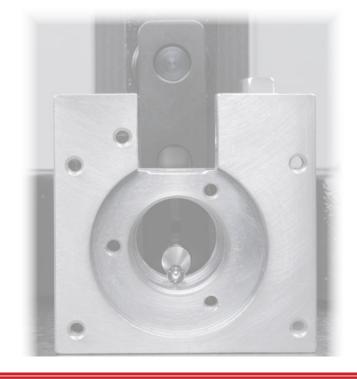

Specifications

Mitutoyo

Order No. Package w/AC adatper	64PKA094B	64PKA095B	64PKA129B	64PKA130B	
Inch/Metric Main unit	518-241	518-243	518-245	518-247	
Measuring range (Stroke)	(14 in / 350 mm)	(24 in / 600 mm)	(14 in / 350 mm)	(24 in / 600 mm)	
Resolution Inch/Metric	0.001/0.005 mm 0.00005/0.0001/0.0002 in				
Accuracy Measurement*1	± (2.4 + 2.1L/600) μm				
at 20 °C Repeatability*1	2σ ≤ 1.8 μm				
Perpendicularity*2 (20 °C)	7 μm	12 µm	7 μm	12 µm	
Guiding method	Roller bearing				
Drive method	Manual (wheel)				
Measurement principle	Electromagnetic induction absolute encoder				
Measuring force	1.5±0.5 N				
Data output ports	Digimatic / Digimatic 2 / USB*3				
Air-suspension feature	Not included Included (for positioning only)*4				
Power supply	Alkaline AA /LR6 batteries × 4 (standard accessories) / AC adapter (optional accessory)*5 / Supports NiMH (HR6) rechargeable batteries × 4				
Battery life guidelines*6	Approx. 1200 hours (without using the air-suspension feature)				
battery life guidelifies	Approx. 90 hours (when using the air-suspension feature)				
Mass	25 kg	29 kg	26 kg	30 kg	
Size (mm)	Stroke 350 mm type: 280(W) x 273(D) x 784(H) mm Stroke 600 mm type: 280(W) x 273(D) x 1016(H) mm		m im		
Operating temperature range (recommended)	0 to 40 °C (10 to 30 °C)				
Operating humidity range	20 to 80 % RH (non-condensing)				
Storage temperature range	-10 °C to 50 °C				
Storage humidity range	5 to 90 % RH (non-condensing)				

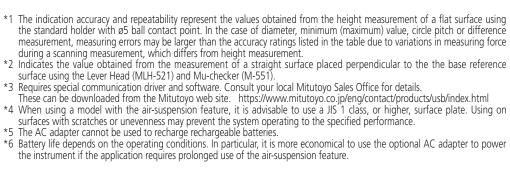



64PKA130B 518-247




64PKA129B 518-245

Standard accessories

Order No.	Item	
12AAA715	Probe diameter calibration block	
05HZA148	ZA148 ø5 mm stepped probe	
_	Alkaline batteries x 4 (AA/LR6)	

Dimensions

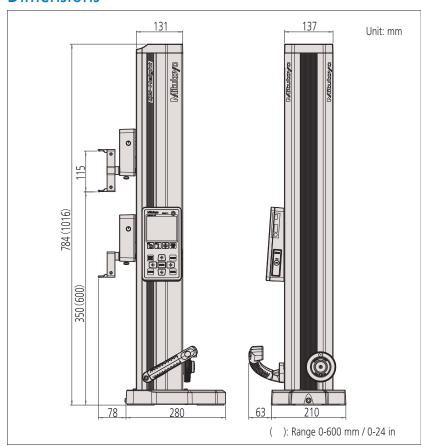



Whatever your challenges are, Mitutoyo supports you from start to finish.

Mitutoyo is not only a manufacturer of top-quality measuring products but one that also offers qualified support for the lifetime of the equipment, backed by comprehensive services that ensure your staff can make the very best use of the investment.

Apart from the basics of calibration and repair, Mitutoyo offers product and metrology training, as well as IT support for the sophisticated software used in modern measuring technology. We can also design, build, test and deliver measuring solutions and even, if deemed cost-effective, take your critical measurement challenges in-house on a sub-contract basis.



Note: All information regarding our products, and in particular the illustrations, drawings, dimensional and performance data contained in this printed matter as well as other technical data are to be regarded as approximate average values. We therefore reserve the right to make changes to the corresponding designs. The stated standards, similar technical regulations, descriptions and illustrations of the products were valid at the time of printing. In addition, the latest applicable version of our General Trading Conditions will apply. Only quotations submitted by ourselves may be regarded as definitive. Specifications are subject to change without notice.

Mitutoyo products are subject to US Export Administration Regulations (EAR). Re-export or relocation of our products may require prior approval by an appropriate governing authority.

Trademarks and Registrations

Designations used by companies to distinguish their products are often claimed as trademarks. In all instances where Mitutoyo America Corporation is aware of a claim, the product names appear in initial capital or all capital letters. The appropriate companies should be contacted for more complete trademark and registration information.